Golf/Vento

Current Flow Diagram

No. 27 / 1


Edition 03.1992

Headlight washer system

From October 1991

Position of relays:

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

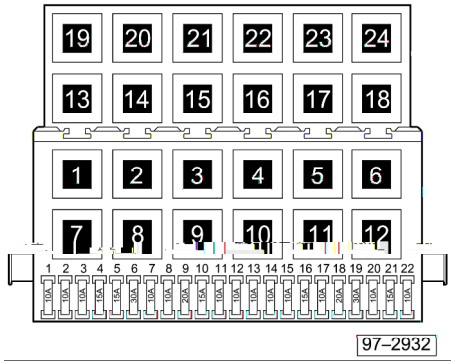

7 - Headlight washer system relay (33)
8 - Automatic intermittent wash/wipe relay (99)

Notes:


The number in brackets behind the part designation denotes the control number on the housing.

Fuse colours
30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red

Golf/Vento

Current Flow Diagram

No. 27 / 2

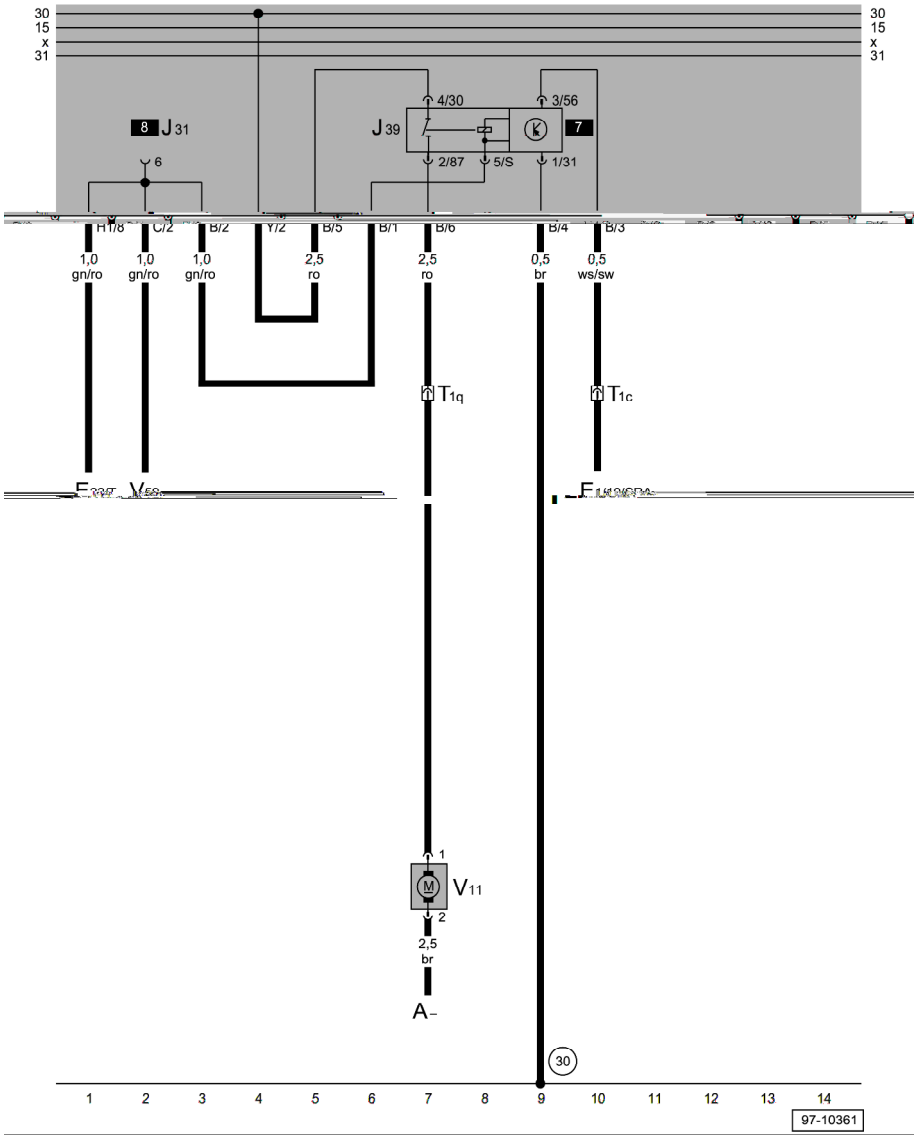

Headlight washer system

A	-	Battery
E1	-	Lighting switch
E22	-	Intermittent wiper switch
J31	-	Automatic intermittent wash/wipe relay
J39	-	Headlight washer system relay
T1c	-	Single connector, behind relay plate
T1q	-	Single connector, behind relay plate
V11	-	Headlight washer system pump
V59	-	Windscreen and rear window washer pump
30	-	Earth point -1-, next to relay plate

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink